



Section : . Advanced InaSAFE Customisation

Module : .



“ ”

InaSAFE 4.3.4 Options

Organisation Profile Population Parameters GIS Environment Earthquake Template Options Demographic Defaults Advanced

Please set parameters for each hazard class below. Affected status and displacement rates selected on this tab are only applied to exposed populations.

Classification	Affected	Displacement Rate
Earthquake		
Earthquake MMI scale		
X	☒	100.0 %
IX	☒	100.0 %
VIII	☒	100.0 %
VII	☒	100.0 %
VI	☒	100.0 %
V	☒	0.0 %
IV	☒	0.0 %
III	☒	0.0 %
II	☒	0.0 %
I	☐	0.0 %
Generic classes		
High	☒	100.0 %
Medium	☒	100.0 %
Low	☐	0.0 %
Flood		
Flood wet/dry classes		
Wet	☒	1.0 %
Dry	☐	0.0 %
Flood classes		
High	☒	5.0 %

Restore defaults

OK Export Import Cancel Help

Name Expectation



Check your knowledge:

1. :
b.
2. :
b.
3. :
b.